



## Parts List:

1. Main Filter Body
2. Flex Hose (3 Ft)
3. Threaded 90 Degree Elbow Assembly
4. Rubber Seal
5. Threaded Slip Fitting
6. Inlet Pipe
7. Lid
8. Filter Sock
9. Chemical Media Cartridge (optional)
10. Adjustable Water Flow Gate
11. Nylon Screw
12. Blue Foam Block
13. See Through Cover
14. Egg Crate Shell (optional)
15. Blue Bio Balls (optional)
16. Drip Tray (optional)
17. Blue Polyester Pad (optional)
18. Bulkhead Assembly
19. Wrench

\*Item 14-17 are parts of the Bio-media Kit (optional)

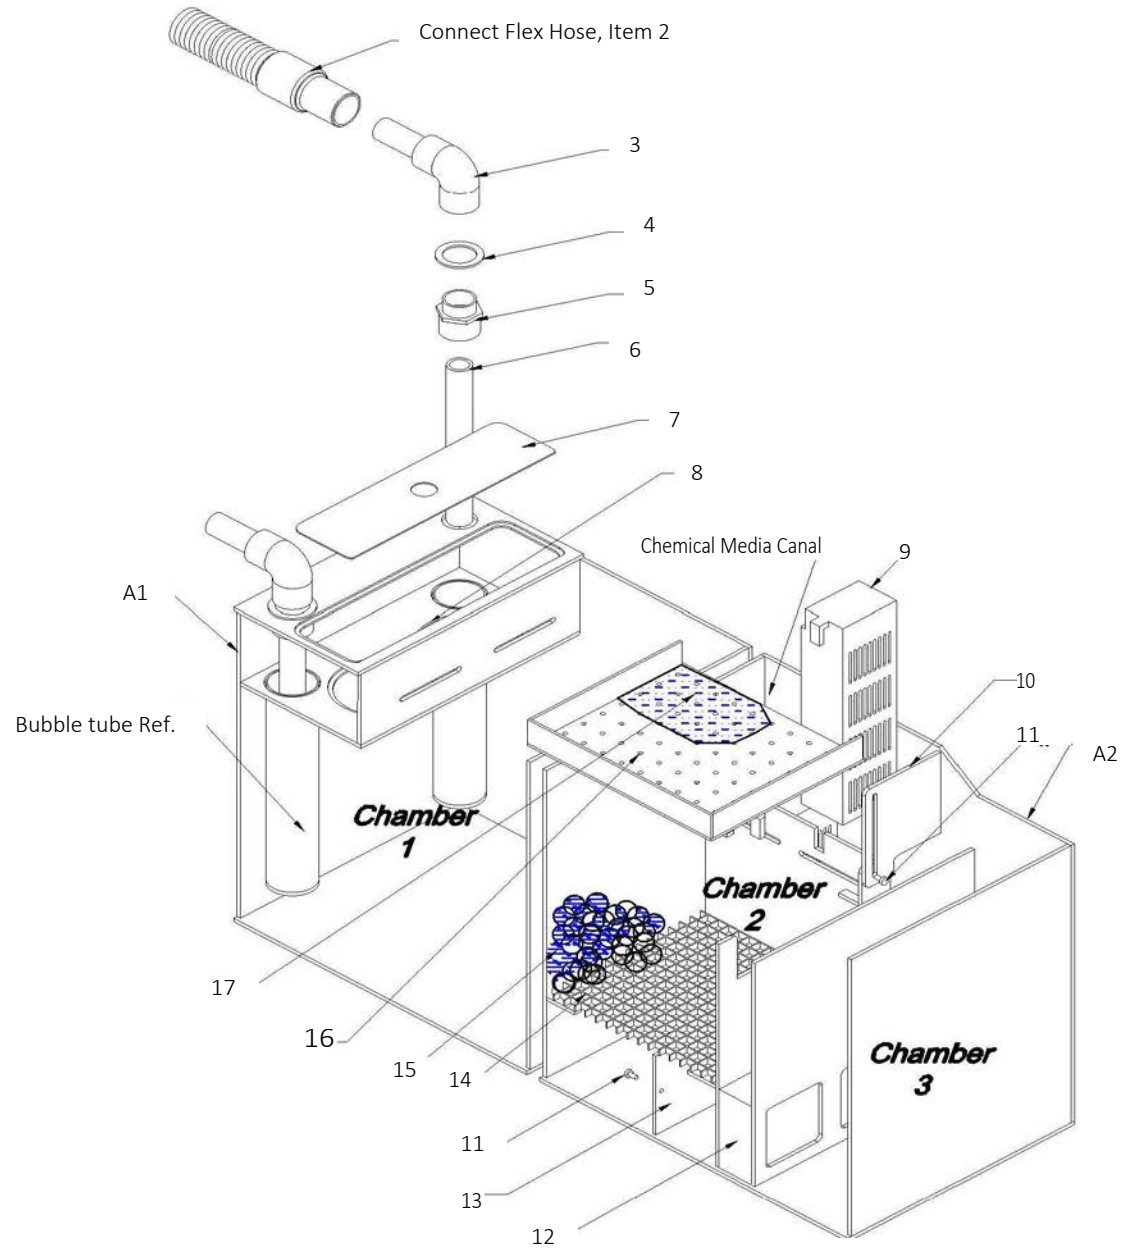

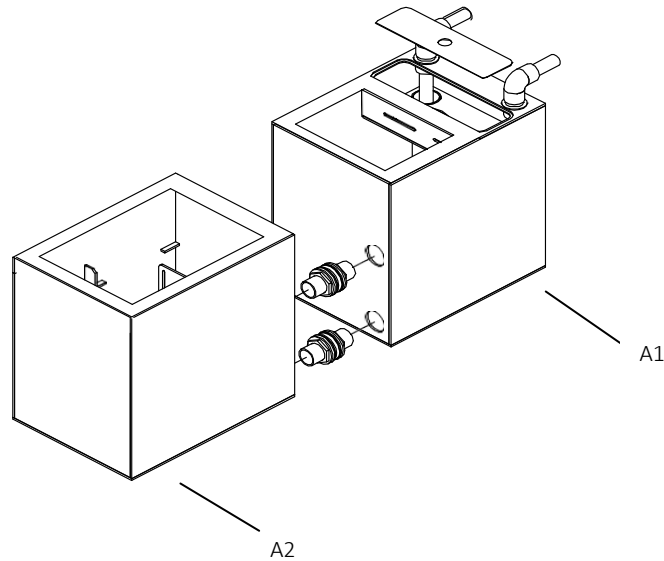

### Main Bodies Assembly Direction:

Remove the filter from the packaging and remove all tape and cardboard. Verify that you have all the necessary parts for the assembly and follow the directions step by step.

#### **Step 1:**

Assure that you have the following items:


- 2 unit 1" bulkhead assembly
- 1 unit wrench

As shown, remove the bulkhead nuts from both sides of the bulkhead assembly.

#### **Step 2:**

Install and tighten the bulkhead through the lower hole on the main body (A2). Make sure that the black rubber seal is installed on the outside edge of the panel. Repeat this process to install the second bulkhead.

Carefully tighten the bulkheads as they are located inside the 3" wide chemical media canal and you may not be able to tighten them freely.

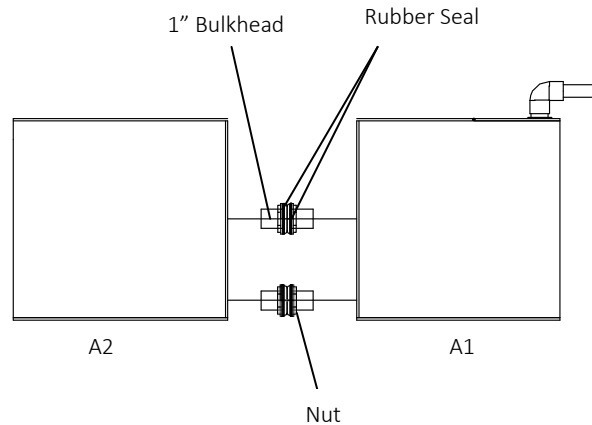

#### **Step 3:**

After properly placed the main body (A2) in the cabinet or other appropriate location, install the main body (A1).

Install and tighten the bulkhead through lower hole on the main body (A1). Make sure that the black rubber seal is installed on the outside edge of the panel. Repeat the same process to install the second bulkhead.